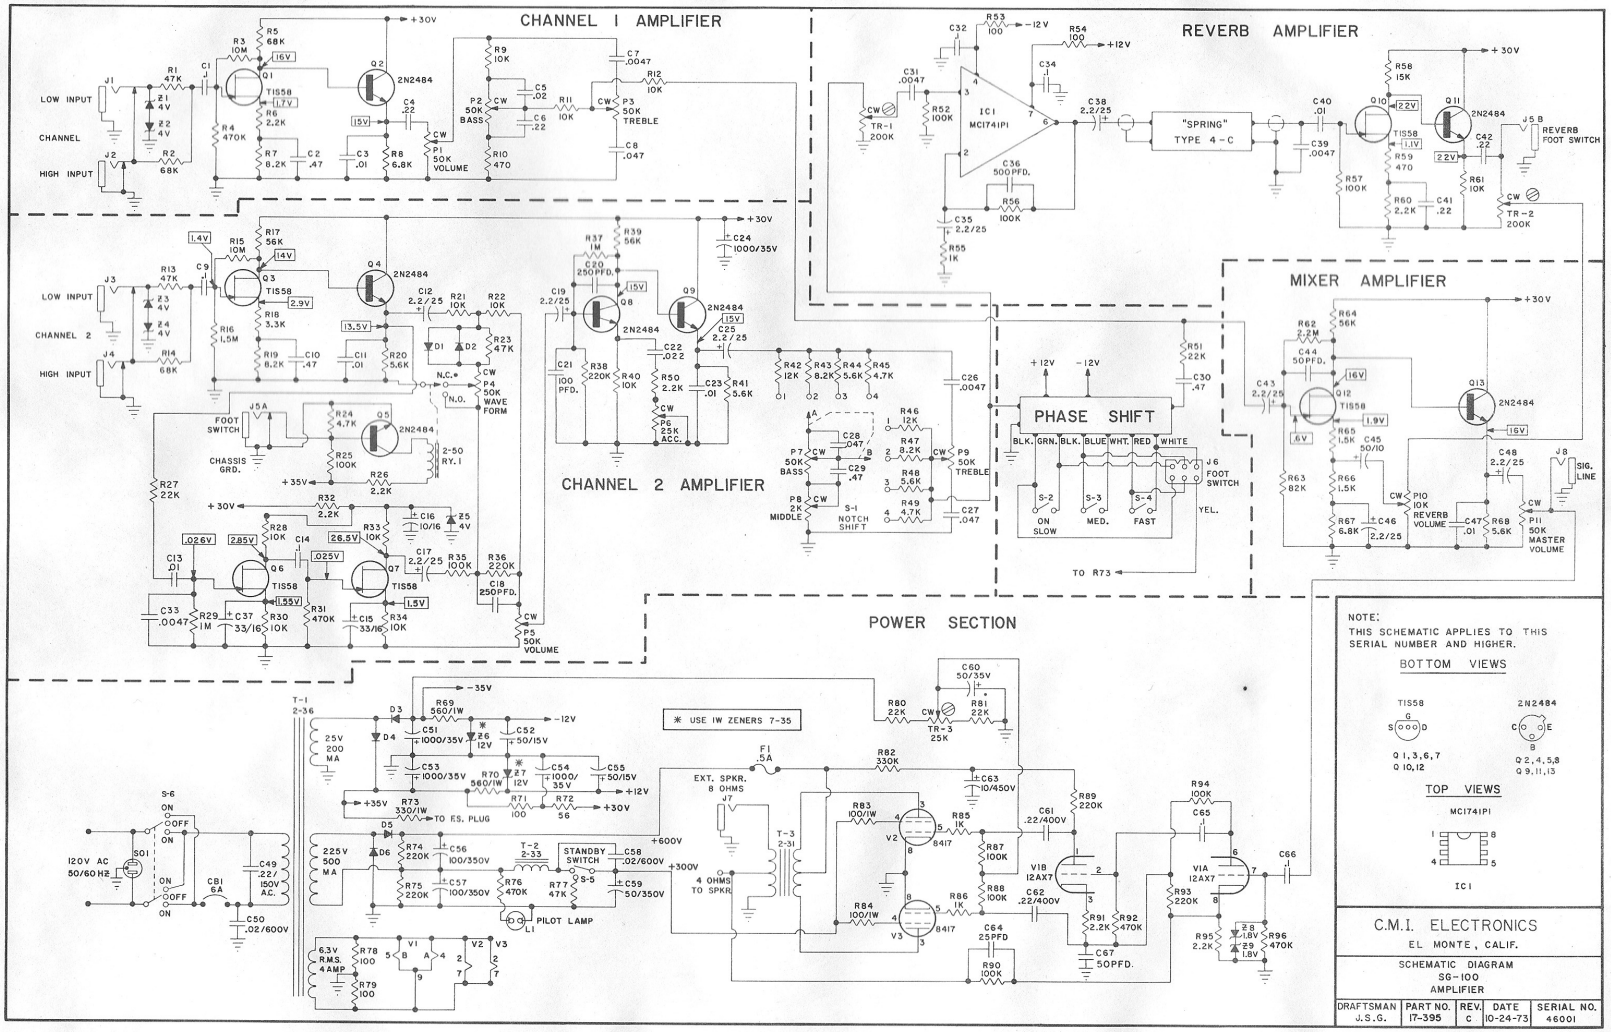
CHANNEL 1 AMPLIFIER
REVERB AMPLIFIER
MIXER AMPLIFIER
CHANNEL 2 AMPLIFIER
PHASE SHIFT
POWER SECTION
LOW INPUT
CHANNEL
HIGH INPUT
CHANNEL 2
"SPRING" TYPE 4-C
REVERB FOOT SWITCH
FOOT SWITCH
CHASSIS GRD.
WAVE FORM
VOLUME
BASS
TREBLE
NOTCH SHIFT
REVERB VOLUME
MASTER VOLUME
SIG. LINE
ON SLOW
MED.
FAST
YEL.
TO R73
* USE 1W ZENERS 7-35
EXT. SPKR. 8 OHMS
4 OHMS TO SPKR
TO FS. PLUG
PILOT LAMP
STANDBY SWITCH
120V AC 50/60 HZ
NOTE:
THIS SCHEMATIC APPLIES TO THIS SERIAL NUMBER AND HIGHER.
BOTTOM VIEWS
TOP VIEWS
Q 1,3,6,7 Q 10,12
Q 2,4,5,8 Q 9,11,13
C.M.I. ELECTRONICS
EL MONTE, CALIF.
SCHEMATIC DIAGRAM SG-100 AMPLIFIER
DRAFTSMAN J.S.G.
PART NO. 17-395
REV. C
DATE 10-24-73
SERIAL NO. 46001