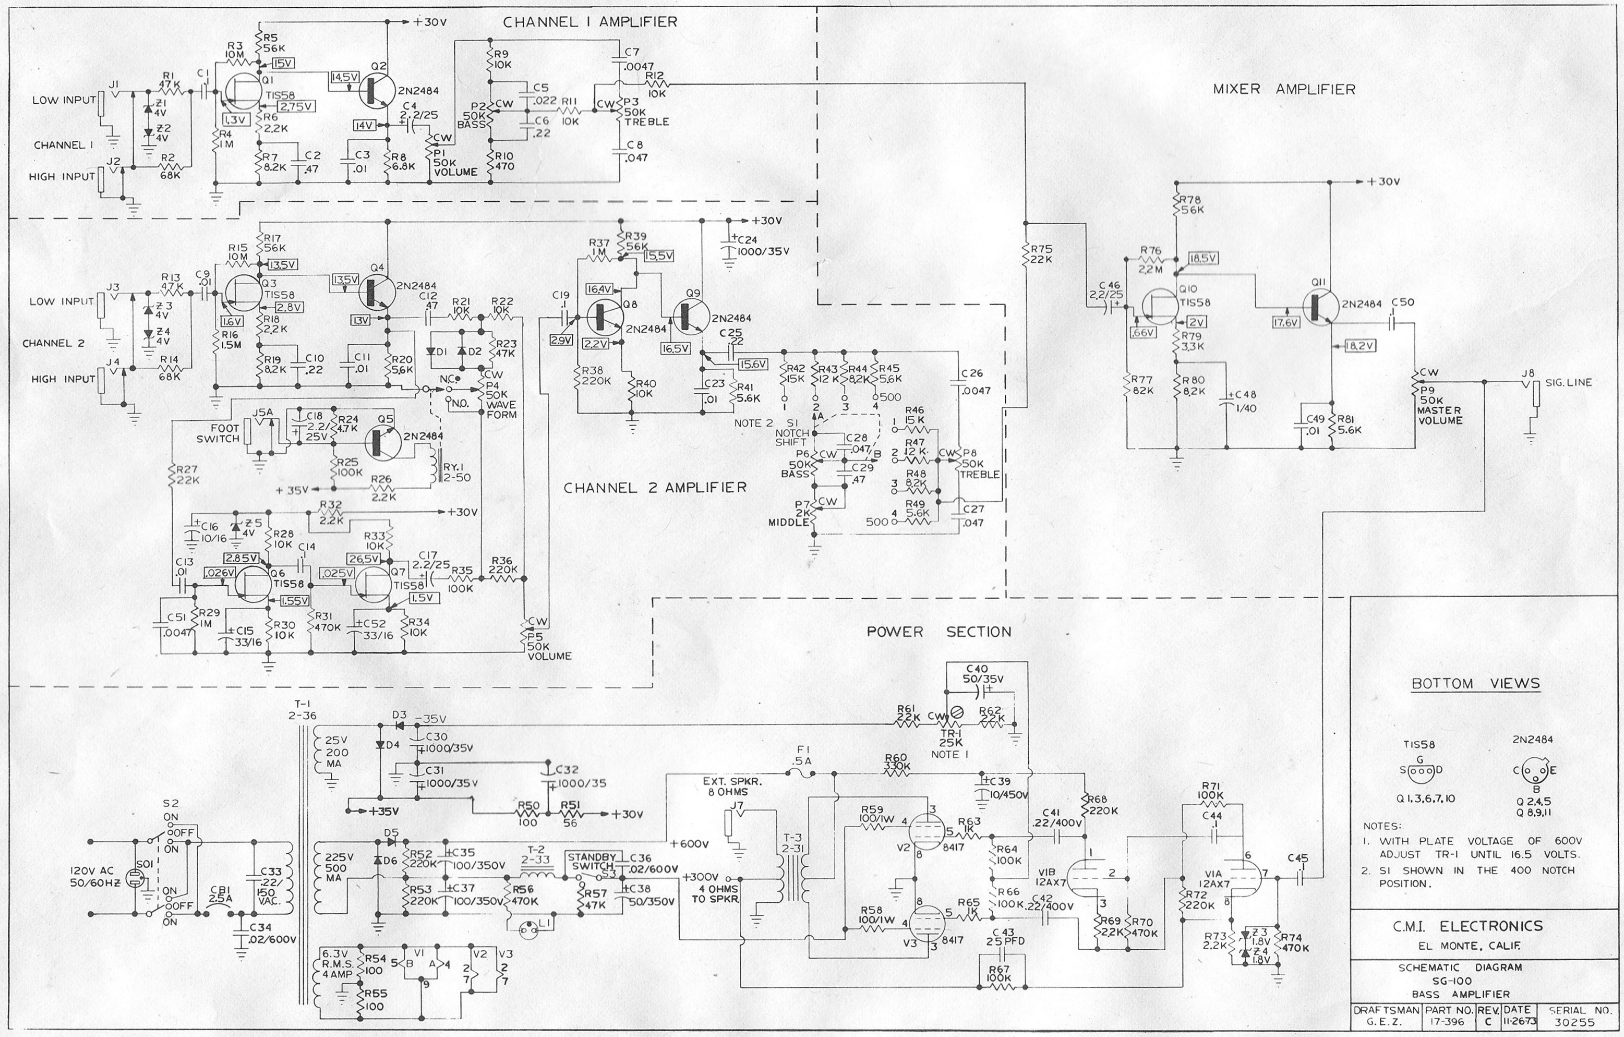
CHANNEL 1 AMPLIFIER
MIXER AMPLIFIER
CHANNEL 2 AMPLIFIER
POWER SECTION
LOW INPUT
CHANNEL 1
HIGH INPUT
LOW INPUT
CHANNEL 2
HIGH INPUT
FOOT SWITCH
+30V
+35V
+600V
+300V
4 OHMS TO SPKR.
EXT. SPKR. 8 OHMS
VOLUME
BASS
TREBLE
WAVE FORM
MASTER VOLUME
SIG. LINE
NOTCH SHIFT
MIDDLE
STANDBY SWITCH
120V AC 50/60HZ
TR-1 25K
NOTE 1
NOTE 2
BOTTOM VIEWS
TIS58
2N2484
Q 1,3,6,7,10
Q 2,4,5 Q 8,9,11
NOTES:
1. WITH PLATE VOLTAGE OF 600V ADJUST TR-1 UNTIL 16.5 VOLTS.
2. S1 SHOWN IN THE 400 NOTCH POSITION.
C.M.I. ELECTRONICS
EL MONTE, CALIF.
SCHEMATIC DIAGRAM
SG-100
BASS AMPLIFIER
DRAFTSMAN G.E.Z.
PART NO. 17-396
REV C
DATE 11-2673
SERIAL NO. 30255

SC 215